

FIG. 4







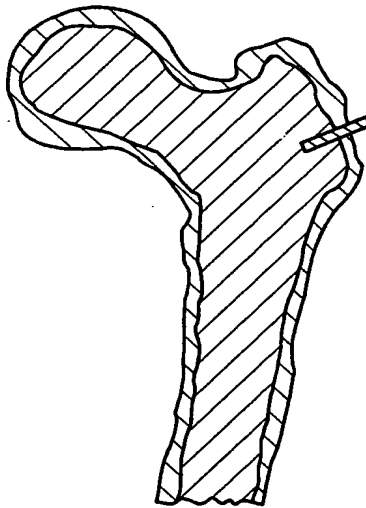


FIG. 5



TIME →

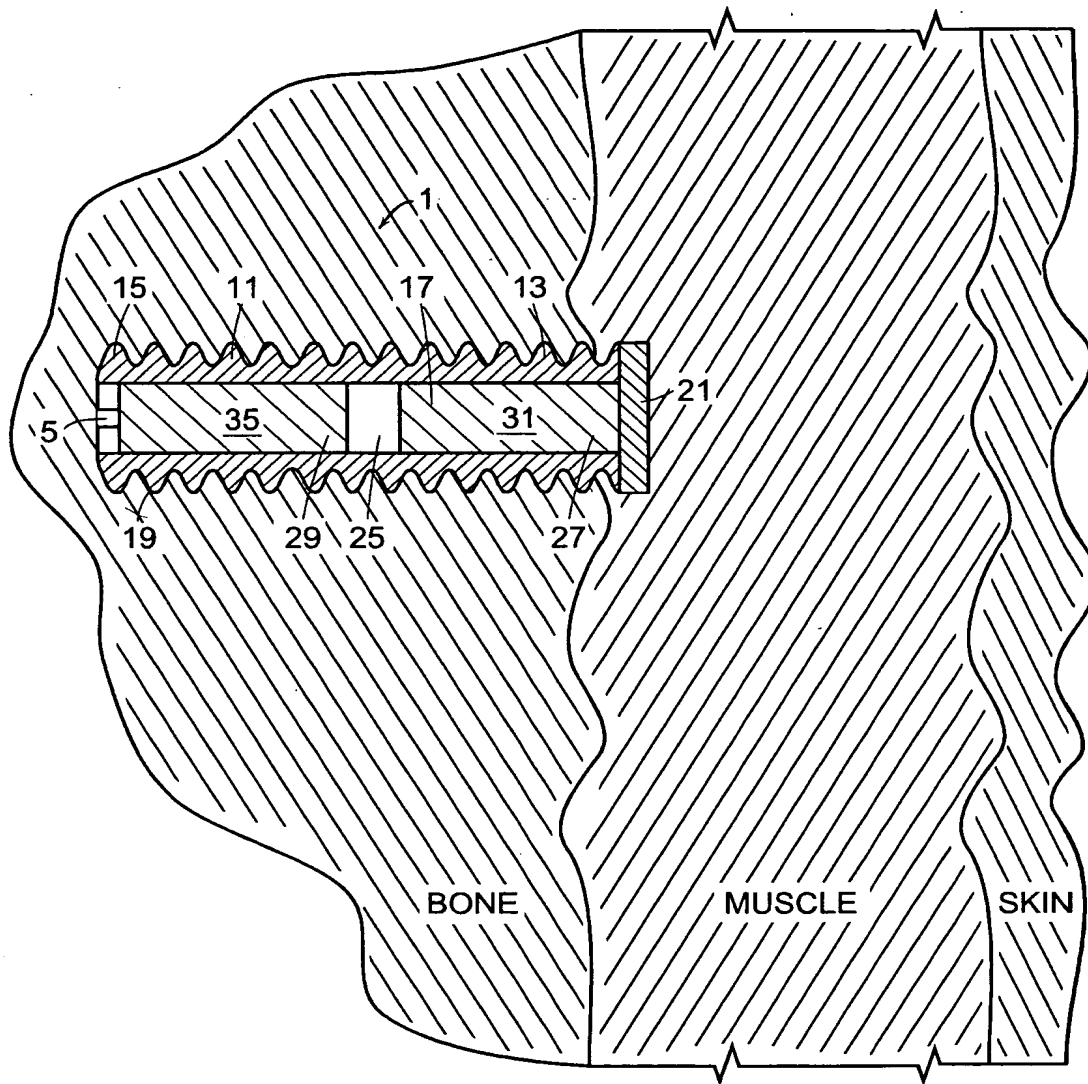


FIG. 7

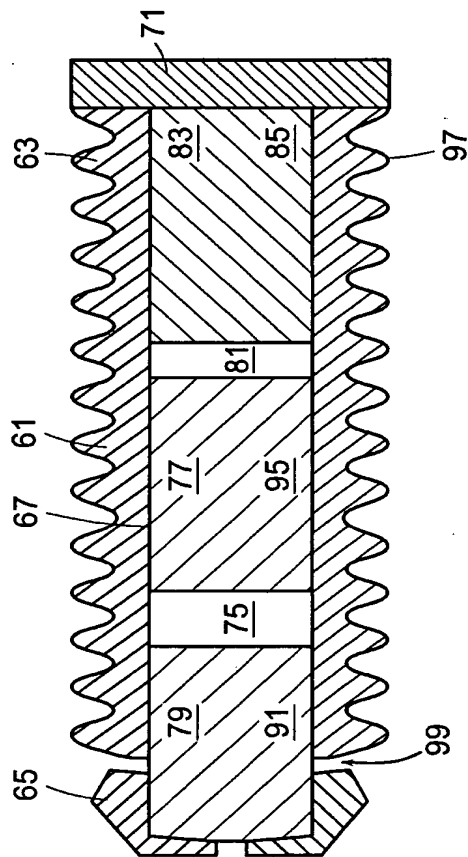


FIG. 8



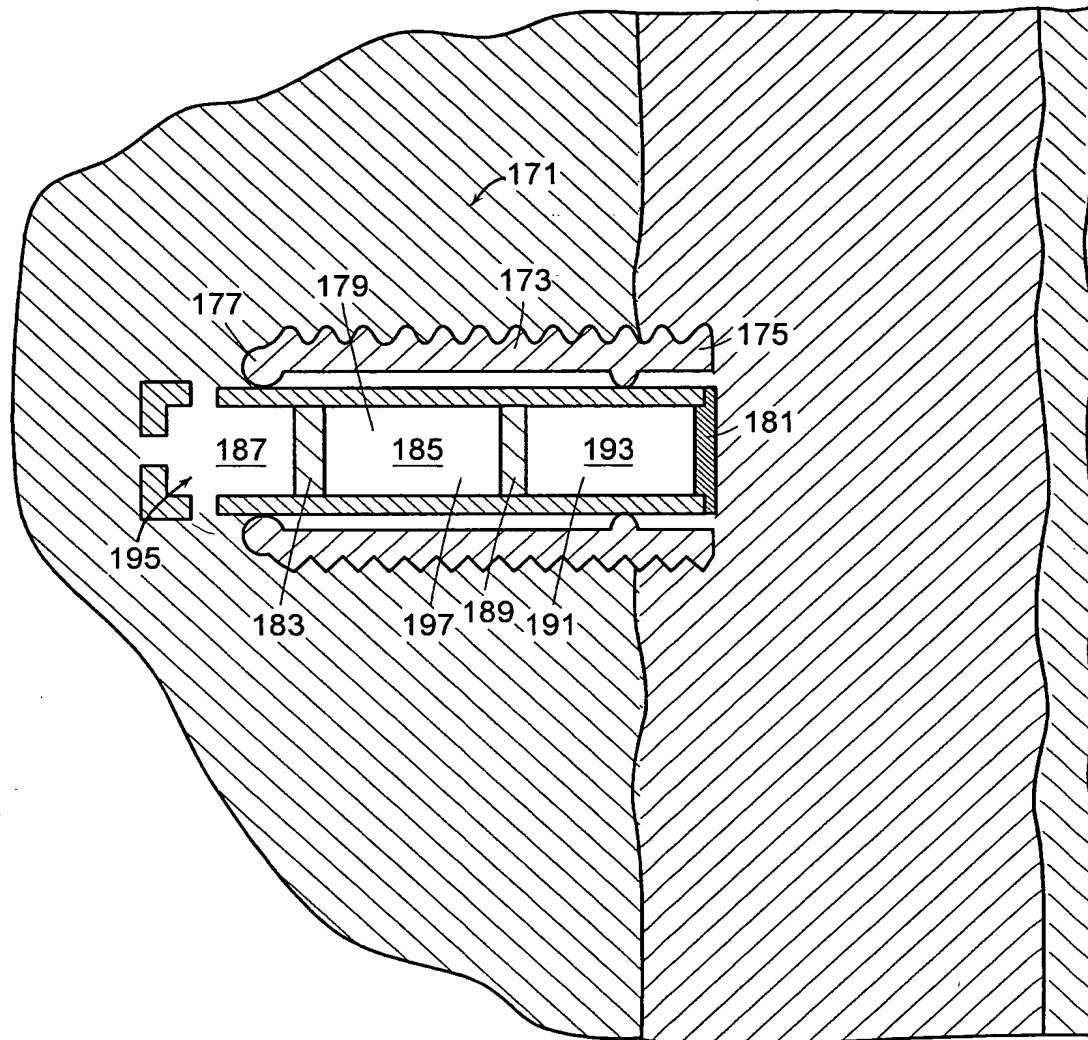


FIG. 10

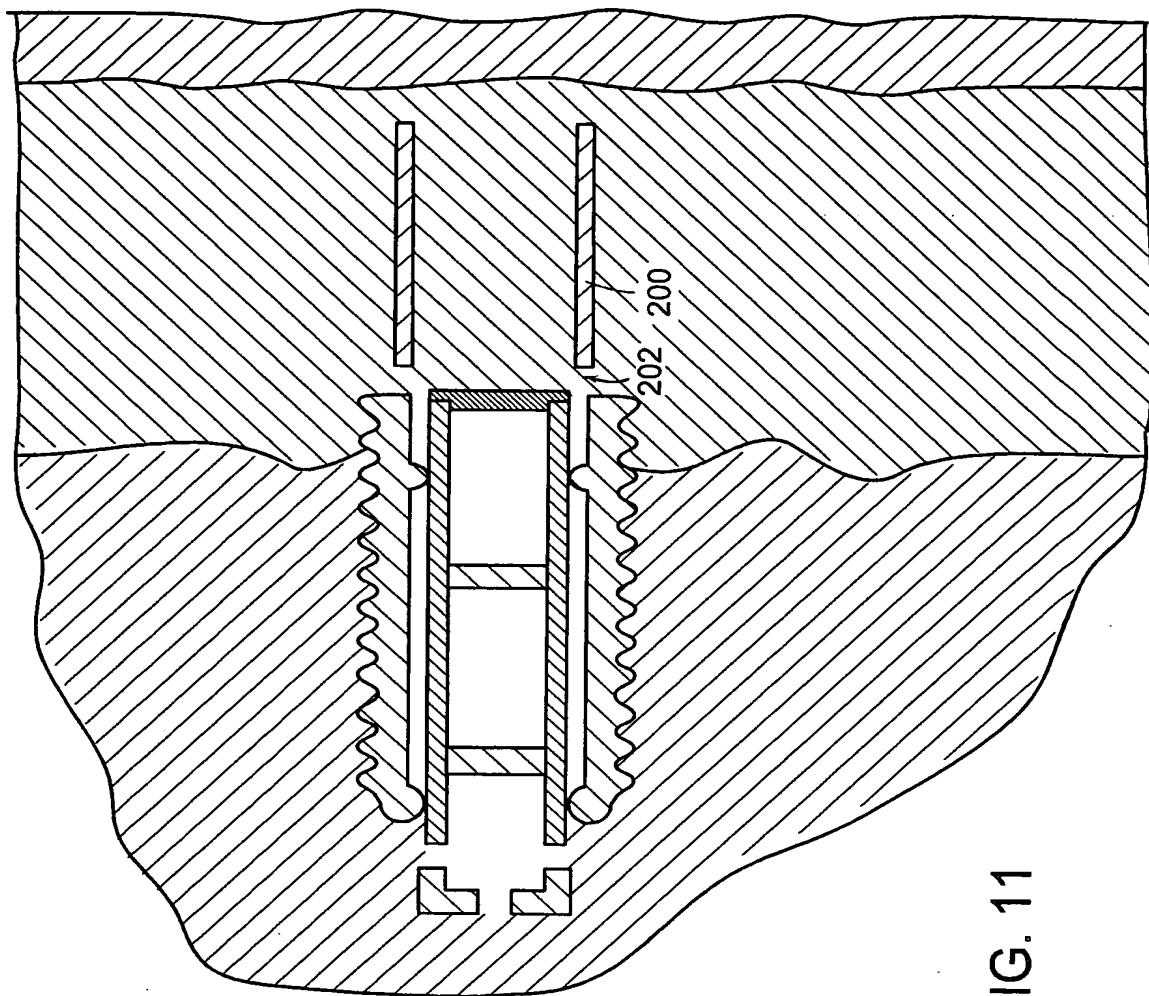


FIG. 11



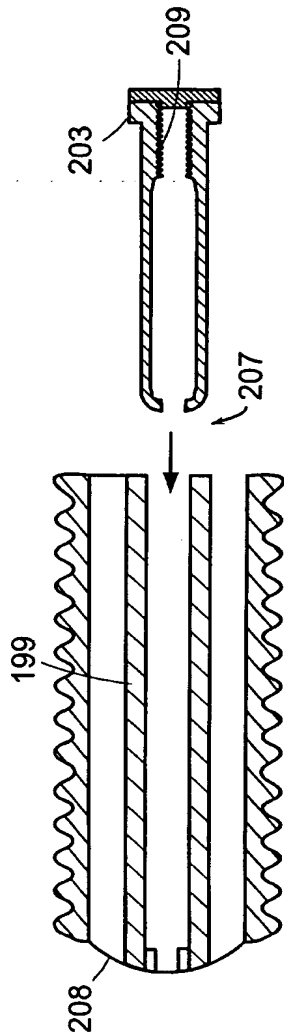


FIG. 12

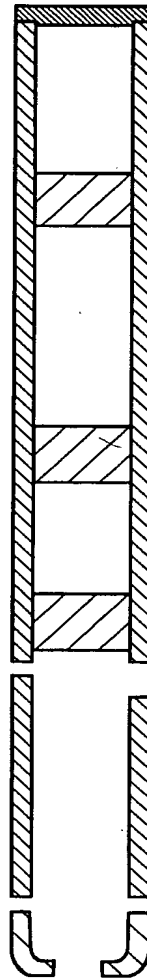


FIG. 13

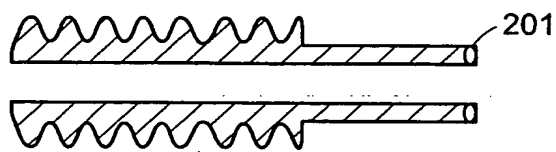


FIG. 14

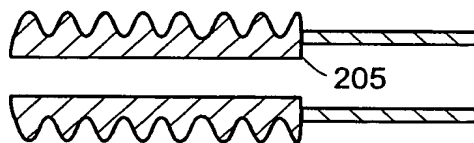


FIG. 15

INSERT CARRIER

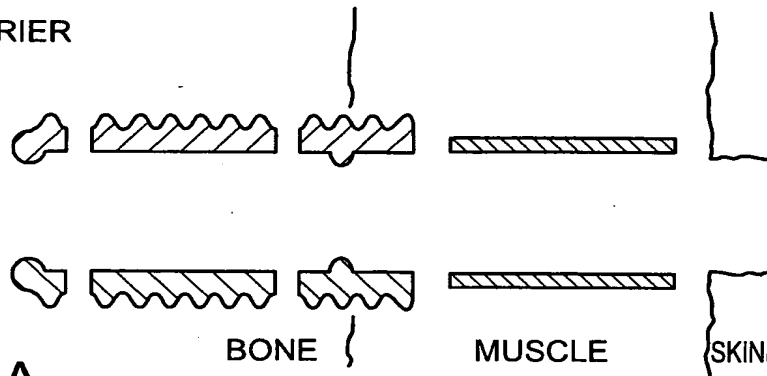


FIG. 16A

INSERT CANNULA

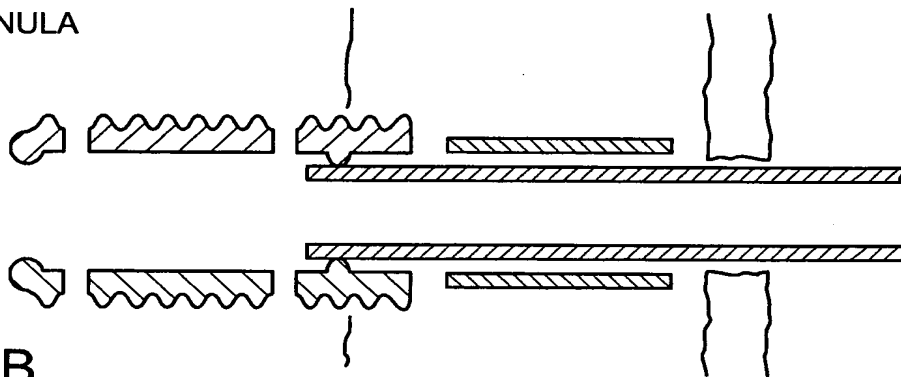


FIG. 16B

INSERT BFA, THROUGH CARRIER

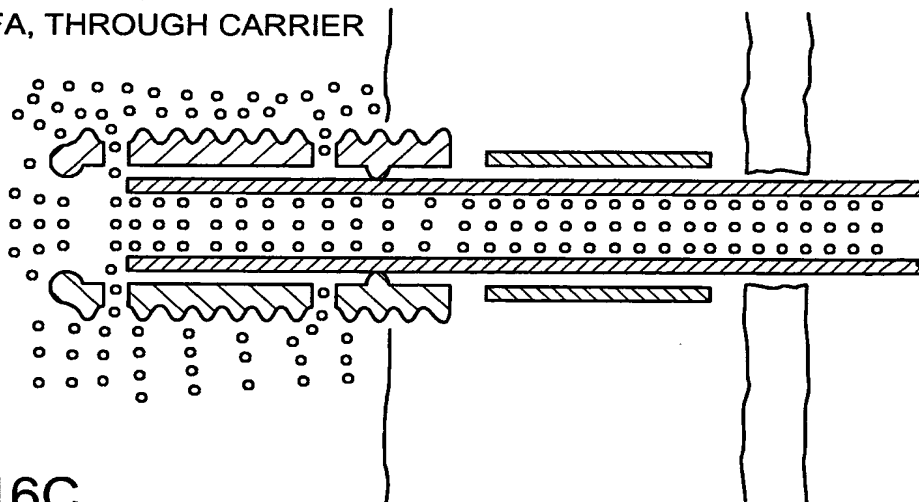


FIG. 16C

REMOVE CANNULA

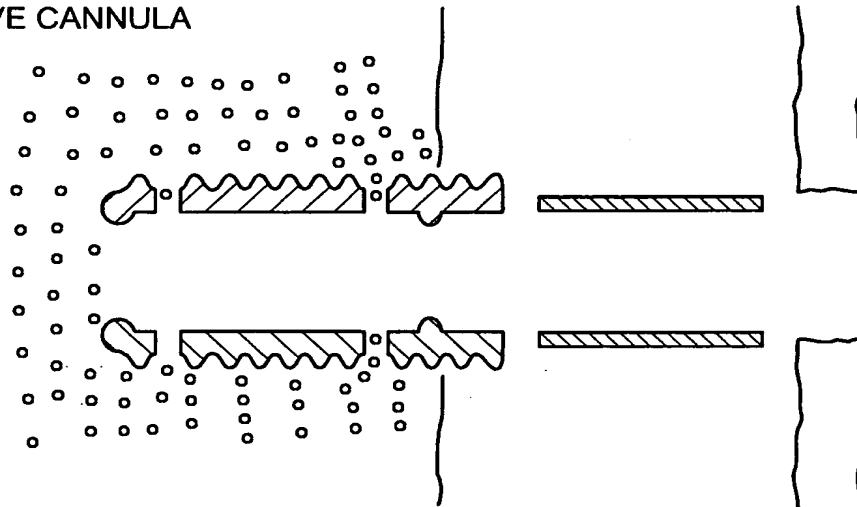


FIG. 16D

INSERT DRUG PUMP

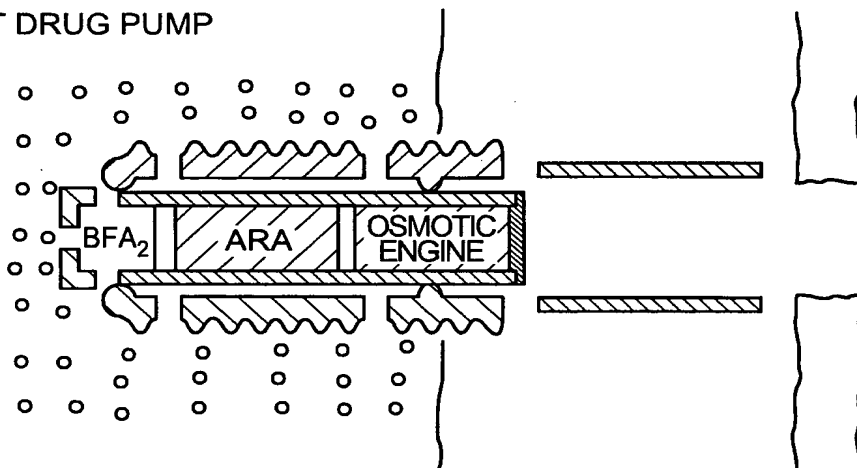


FIG. 16E

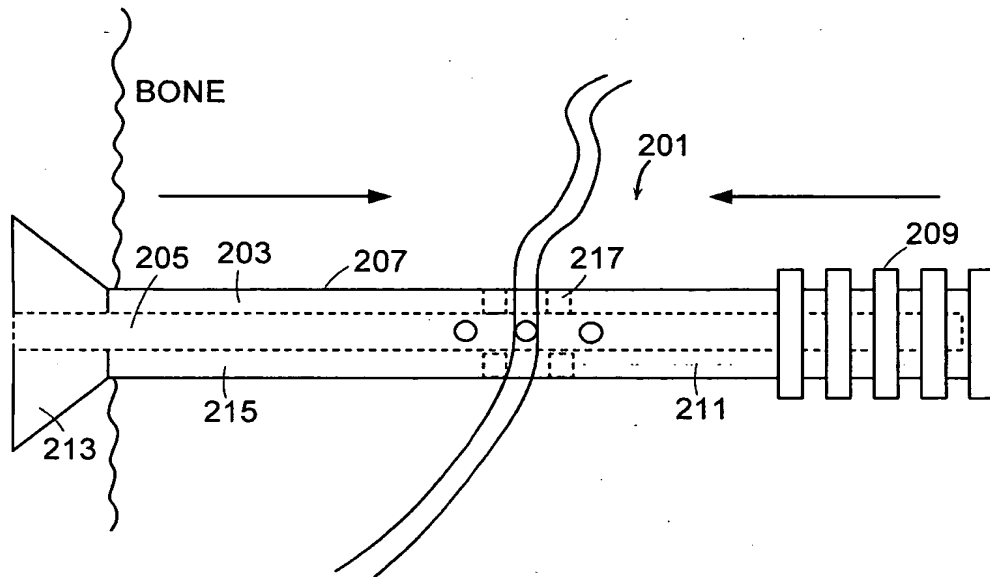


FIG. 17A

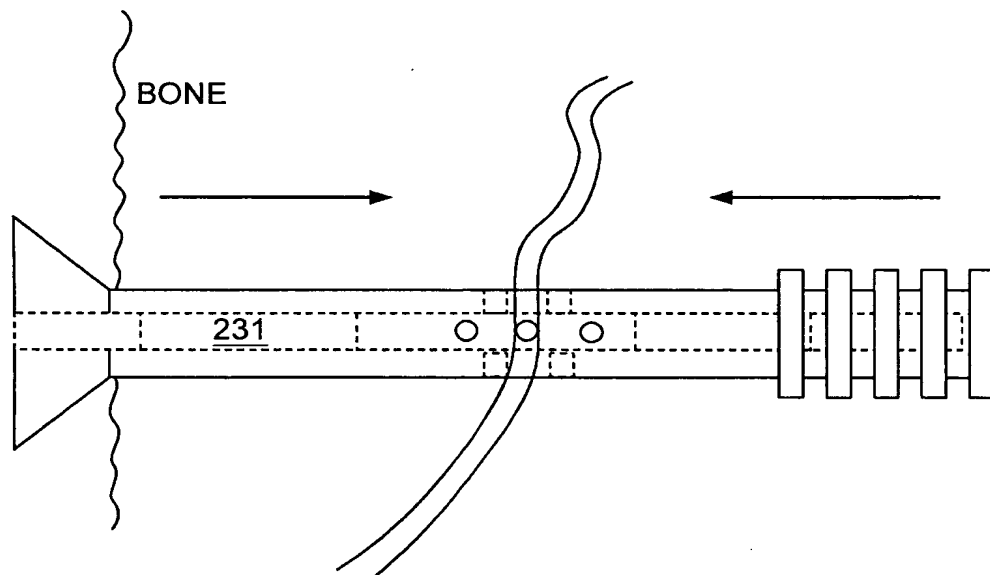


FIG. 17B